



NORTH AMERICA'S LUXURY FIREPLACE

# Mendota Proflame Remote Programming Instructions

## Change remote from F\* to C\* (temperatures) (PF1 & PF2)

- Press and hold the **Thermostat** button and **O** (bottom button) at the same time and release.

## To put remote in Child Lockout or take out of Child Lockout (PF1 & PF2)

- Press and hold the **^** (up button) and the **O** (bottom button) at the same time and release.

## ENABLE / DISABLE Thermostat on a Mendota Proflame II remote only (PF2)

- Take one battery or all batteries out. This will work by just removing one battery.
- Press and hold down the **Thermostat** button on the remote.
- Install the third battery while still holding the **Thermostat** button down.
- If you see "Set" – the Thermostat option is now enabled.
- If you see "Clr" the Thermostat option is now disabled.
- If you did not see "Set" or "Clr" repeat the procedure to remove or add the option back to the remote.

## ENABLE / DISABLE functions on the Mendota Proflame II remote only (PF2)

- Take one battery or all batteries out. This will work by just removing one battery.
- Press and hold both the **ON/OFF** and **MODE** buttons at the same time.
- Install the third battery while still holding both buttons. Continue holding both buttons once the third battery is installed, *then release the **MODE** button only.*
- The screen will show either "**Clr**" or "**Set**" with the first mode being your option to disable or enable.
  1. "**Clr**" will *remove* the mode by using the **up** or **down** arrow while still holding both buttons. The icon will disappear once removed, or the icon will show up again once added.
    - Use the **MODE** button to move to the next function, please note you should never program out the fan or CPI/IPI mode on the remote.
  2. "**Set**" will *add* that mode by using the **up** or **down** arrow while still holding both buttons. The icon will disappear once removed, or the icon will show up again once added.
    - Use the **MODE** button to move to the next function, please note that you should never program out the fan or CPI/IPI mode on the remote, or the CPI/IPI feature.

## ENABLE / DISABLE functions on the Mendota Proflame I remote only (PF1)

*NOTE: It is not possible to program out thermostat mode on PF1 remotes.*

- Take one battery or all batteries out. This will work by just removing one battery.
- Press and hold both the **ON/OFF** and the **MODE** buttons at the same time.
- Install the third battery while still holding both buttons. Continue holding both buttons once the third battery is installed, *then release the **MODE** button only.*
- The screen will show "CFG."
- You can now use the **up** or **down** arrow button to program out the function on the remote. Please note that you should never program out the fan feature on the remote.